


## aP23KC-S08 USER GUIDE

### Voice OTP Copier for aP23 series SOP8

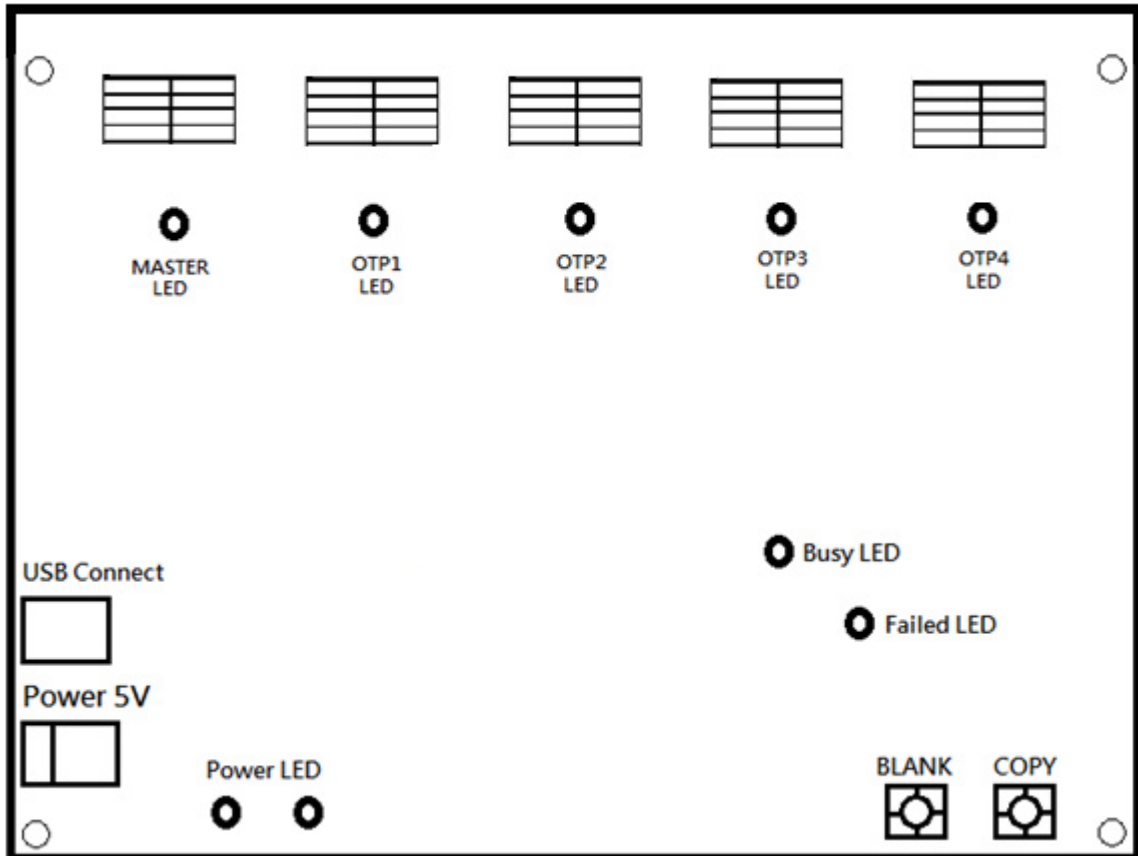

#### \*\* INTRODUCTION :

The voice OTP 1 to 4 copier is designed to fast copying Aplus' 3<sup>rd</sup> OTP devices for mass production. Devices supported are aP23682/341/170/085 SOP8.

From one and up to four pcs. of blank OTP devices can be copied at one time.

**Note :** The master IC should be compiled by V2.4 and up version software.

#### \*\* OPERATION STEPS :

##### 1. Connect Power Supply :

- Connect the 5V DC 1Amp adaptor to the DC power jack.
- Red Power LED turn ON then Master LED & OTP LEDs turn ON from left to right to Failed LED to Busy LED one by one total 3 times to indicate ready for use.

**2. Blank check :**

- Insert OTP ICs to the empty OTP sockets.
- Press Blank button to start.
- Green OTP LED turns ON means OTP under blank check is passed.
  - \*\* If any one of the green OTP LED keep flash, that means it's a defective one.  
Please change a new one to continue the work.
  - \*\* If any one of OTP IC put in wrong direction, all Green OTP LEDs would keep flash together to warn you correcting the mistake.

**3. Copy :**

- Press Copy button to start copy.
  - \*If the Master LED keep flash that means the copier finds the Master IC has some problems.
- Green OTP LED turn ON means OTP copy is passed.
- If any one of the OTP is failed, its Green OTP LED would be extinguished and Failed LED turn ON.

\*\* USB connect is for firmware updated if necessary in the future.