


# STAND-ALONE WRITER(SAW1.0G) USER GUIDE

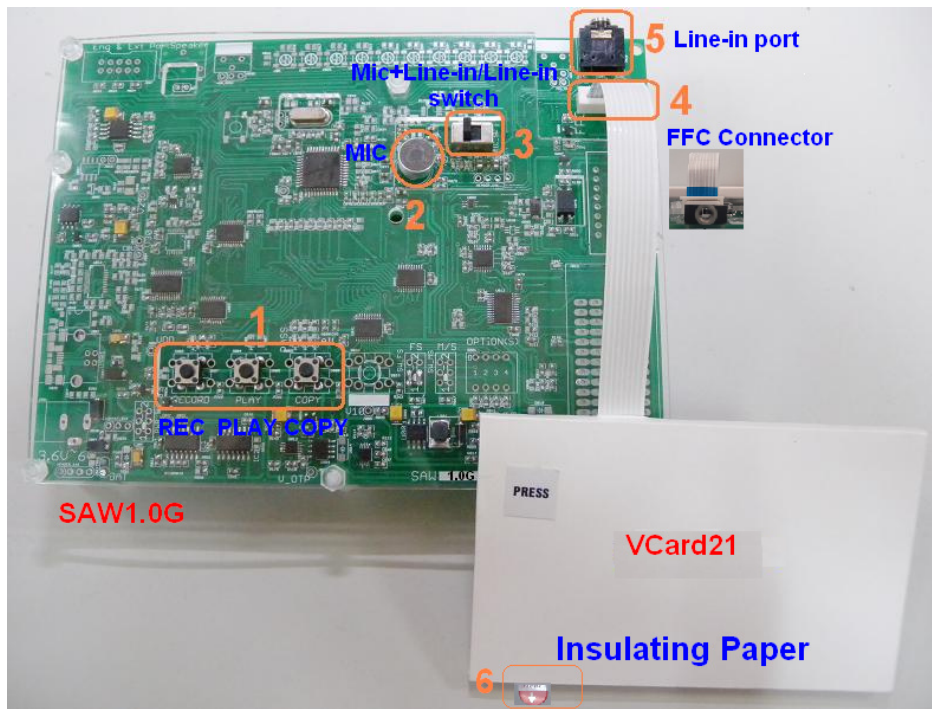

- Block 1. REC :Recording key    PLAY: Playback key    COPY : Programming key
- Block 2. MIC : Microphone
- Block 3. Switch for selecting MIC + Line-in or Line-in recording
- Block 4. FFC Connector : Connect VCard21 to proceed programming
- Block 5. Line-in port
- Block 6. Insulating Paper

- Step 1. Put 4 x AA batteries into battery holder in the back.
- Step 2. Select Mic + Line-in or Line-in recording ( Block 3 ).
- Step 3. Press REC key & hear “ Bee “ sound then red LED on to start recording. Press REC key again &hear “ Bee, Bee “ sound then red LED to finish Recording. Max. recording duration : 21 seconds.
- Step 4. Press PLAY key to check your recording message. If not satisfied, proceed Step 3 again & again until you satisfy the voice message.
- Step 5. Pull-up the FFC Connector (Block 4) & insert VCard21 then put down the FFC connector to fix it for preparing the programming. ( Please note the direction of FFC. It’s blue side should be outward as upper picture. )
- Step 6. Press COPY key & hear “ bee “ sound to start programming. Hear “ Bee, Bee” sound & green LED on means programming completely.

\*Error reminding : If wrong direction of FFC, press “ COPY “ key would show one short bee & one long bee sound to remind you.

- Step 7. Release the Vcard21 from stand -alone writer and pluck insulating paper ( block 6 ),press the “ PRESS” key to enjoy your recording message.